



LIGHT AND SOUND SOOTHER

Model: S1



User Guide

Important Notes:

- Charge the baby soother for 10 hours before initial use.

Safety instructions



Strangulation Hazard. Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 1 metre or 3 feet away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.



Baby soother setup and use:

- Place the baby soother on a flat surface, such as a dresser, bureau, or shelf.
- NEVER place the baby soother or cords within the cot.

WARNING

This portable baby soother is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User Guide, safe to use. Therefore, always read the instructions in this User Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This baby soother is not a substitute for responsible adult supervision.
- Keep this User Guide for future reference.
- Keep the cords out of reach of children.
- Do not cover the baby soother with a towel or blanket.
- Test this baby soother and all its functions so that you are familiar with it prior to actual use.
- Do not use the baby soother in damp areas or close to water.
- Do not install the baby soother in extreme cold or heat, direct sunlight, or close to a heat source.
- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible power outlet.

CAUTION

There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Welcome...

to your S1!

- 10 preloaded soothing sounds.
- 7 multi-color mood lights.
- Warm white night light.
- Sleep timer.
- Portable soother with a built in Lithium battery.
- Up to 50 hours of usage time.
- Easily pocketable.
- USB-C charging.
- Enhanced sound quality with small speaker acoustic chamber.

Need help?

If you have any problems setting up or using your S1, please contact Customer Services at motorolanursery.com/support or call +1-800-763-2207 (United States and Canada, Monday - Friday, [8:00AM - 6:00PM CT]).

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

This User Guide provides you with all the information you need to get the most from your S1.

 
Read the instructions carefully, and be aware that this portable baby soother is only intended as an aid. It is not a substitute for responsible and proper adult supervision.

Set up your S1 before you use it. Follow the simple instructions in ‘Getting started’, on the next few pages.


Important

Only use the power adapter supplied. (The power adapter is not included in Europe and UK version.)

Got everything?

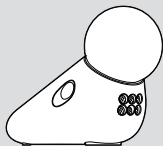

Baby soother

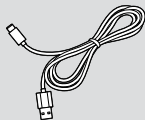 

USB Type C to A cable



USB-A power socket
(Not included in the
Europe and UK versions)



Quick Start Guide

1.	Getting started	7
2.	Getting to know your baby soother	8
3.	Before use.....	10
3.1	Intended use	10
3.2	Setup location	10
3.3	Check the speaker's volume.....	10
4.	Using the baby soother	11
4.1	Set the light mode, sleep timer and power on/off mode.....	11
4.2	Turn the light/sound on or off.....	11
4.3	Light control.....	11
4.4	Soothing sound control.....	11
4.5	Adjust the sound/speaker volume	11
5.	Help	12
6.	Technical Specifications.....	13
7.	General information	14

1. Getting started

Location

Important

Do not place your S1 in the bathroom or other humid areas.

 
Place your baby soother within reach of the AC power outlet and wall socket. The socket-outlet should be installed near the equipment and should be easily accessible.

Connecting and charging the baby soother

Important

Warning! Use only the approved rechargeable built-in Lithium battery supplied with the S1.

1. Plug the supplied USB type-C cable into the USB-C power socket.
2. Plug the USB-C power cable into the power jack on the back of the baby soother.
3. Switch on the AC power (if your AC power outlet has a switch). The battery charging LED indicator will light up in red and turn off when the batteries are fully charged.

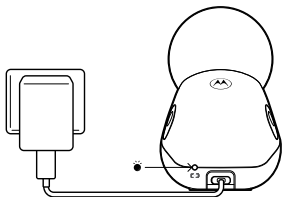

Battery low warning

If the battery charging LED indicator flashes red, it means the battery level is low and needs recharging.

Battery performance

When charging the batteries for the first time, charge for at least 10 hours continuously. In normal conditions, A fully charged battery should provide up to 50 hours of usage time. For detailed information on battery performance, see Technical Specifications on page 13.

 
Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

The charge capacity of the rechargeable batteries will reduce with time as it wears out, giving the baby soother less usage / standby time.

Your S1 is now ready for use.

2. Getting to know your baby soother

Overview of your baby soother

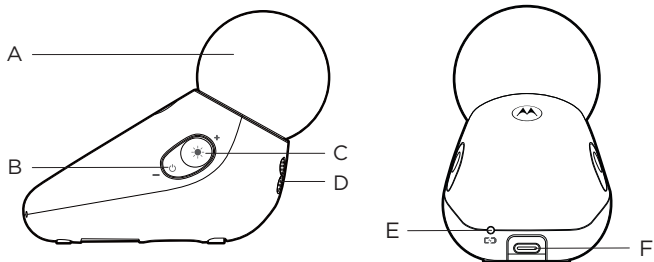

A Light ball

B Light on/off control

- Press once to turn on the light.
- Press once to dim the light when the light is already on.
- Press and hold to turn off the light.

C Mood/Night light control

 
- Press once to increase the brightness of the light.
- When the light is turned on, press and hold to change the light colors. There are 8 colors to choose from.

D Speaker

E Red battery LED indicator

- It turns on when the battery is charging.
- If the baby soother is connected to the power supply, it will turn on when charging begins and turn off after charging is complete.
- If the baby soother is not connected to the power supply, it will flash red when the battery level is low.

F Power jack (USB type-C)

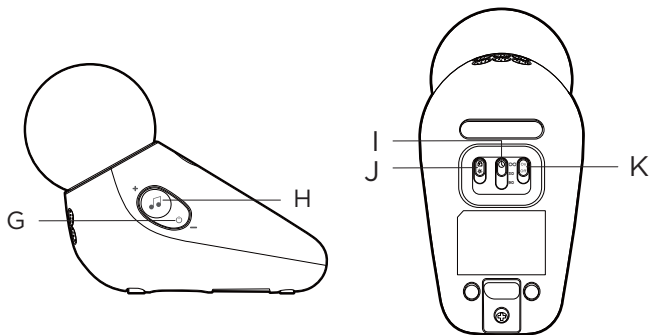

G Volume control

- Press once to turn on the sound.
- Press once to lower the volume when the sound is already on.
- Press and hold to turn off the sound.

H Soothing sound control

- Press once to increase the volume when the sound is already on.
- When the sound is turned on, press and hold to change the sound. There are 10 soothing sounds/lullabies to choose from.

I Sleep timer switch

Select between 30 minutes, 90 minutes or off.

J Light switch

Select between fixed color mode or color cycling mode.

K Power ON/OFF switch

- Switch on the power and the S1 will be in standby mode.
- Switch off the power and both the light and sound will be off.

Note

- No key presses will work when switched off.
- S1 is delivered with power off setting. When you use it, please switch it on.

 
3. Before use

3.1 Intended use

Be aware that this portable baby soother is only intended as an aid. It is not a substitute for responsible and proper adult supervision.

3.2 Setup location

- Do not place the baby soother or cords in the crib or within reach of the baby. The baby soother and cords should be more than 1 meter (3 feet) away from the baby and crib.

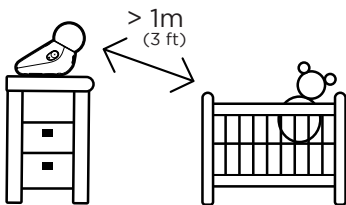


- Make sure the baby soother is not placed near other electrical equipment to avoid interference. Move it 2 meters (6 feet) away from other electrical equipment.

3.3 Check the speaker's volume

Adjust the speaker volume of the baby soother to the desired volume when necessary. See section 4.5 for volume level settings.


4. Using the baby soother

 4.1 Set the light mode, sleep timer and power on/off mode

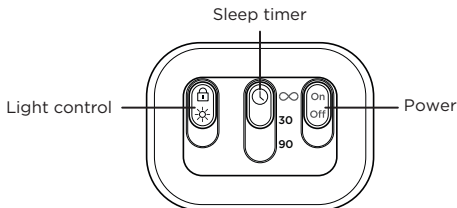




- Light control: slide the switch to select between fixed color mode or color cycling mode. See section 4.3 for more information.
- Sleep timer: slide the switch to select between 30 minutes, 90 minutes or off. When the time is up, the light and sound will turn off.
- Power on/off: slide the switch to power on/off. When powered on, the S1 will be in standby mode. When powered off, both the light and sound will be off, but battery charging still works.


4.2 Turn the light/sound on or off

When the power on/off slide switch is in the ON position, press  once on the corresponding side of the S1 to turn on the light/sound. Press and hold the button to turn it off.



4.3 Light control

- When fixed mode is selected, press and hold  to change to the next color. There is a night light (warm white) and 7 mood light colors (red, orange, yellow, green, cyan, blue, purple) to choose from.
- When cycling mode is selected, the light color will change automatically in sequence to white, red, orange, yellow, green, cyan, blue, purple and so on. The color will change every 5 seconds automatically. As the light changes to the next color, it will fade in within 1 second.
- Press  once to increase the brightness. Press  once to decrease the brightness. There are 5 brightness levels to choose from

4.4 Soothing sound control


When the sound is on, press and hold  to change to the next soothing sound/lullaby. There are 10 sounds/lullabies to choose from. They are Lullaby 1, Lullaby 2, Lullaby 3, Brown noise, White noise, Fan, Waves, Rain, Bird song and Womb pulse.

4.5 Adjust the sound/speaker volume

When the sound is on, press  once to decrease the volume. Press  once to increase the volume. There are 5 volume levels to choose from.

5. Help

The light ball / battery LED Indicator does not turn on.

- Slide the power switch to the ON position. Press  once to turn it on.
- Connect the baby soother to the power supply to recharge it.

The battery LED indicator flashes.

- The battery level is low and needs recharging.

Unable to hear the sound from the speaker.

- The volume level may be set too low. Increase the volume level of the baby soother. See section 4.5 for volume level settings.

For more support, you can reach us at: motorolanursery.com/support or +1-800-763-2207 (United States and Canada).

6. Technical Specifications

Power adapter	SHENZHEN BAIJUNDA ELECTRONIC CO. LTD. Model: UT-681A-5100UY Input: 100-240V AC 50/60Hz, 200mA Output: DC5V 1A OR TEN PAO INTERNATIONAL LTD. Model: S005CAU0500100 Input: 100-240V AC 50/60Hz, 200mA Output: DC5V 1A
Battery	ZHONGSHAN TIANMAO BATTERY CO., LTD. Model: 5C DC3.7V 1200mAh lithium battery
Battery performance	Up to 50 hours with the user case: Continuous night light on low-level brightness and sound on at the lowest volume.

Note

Specifications are subject to change without prior notice.

7. General information

Cleaning and care

Important

Always switch off and disconnect the power adapter before cleaning your portable baby soother.

- Clean your baby soother with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.
- Do not clean any part of the baby soother with thinners or other solvents and chemicals - this may cause permanent damage to the product which is not covered by the warranty.
- Keep your baby soother away from hot, humid areas or strong sunlight, and do not let it get wet.
- Every effort has been made to ensure high standards of reliability of your baby soother. However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.

Product Disposal Instructions

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product according to your local authority's recycling processes. For more information, please contact your local authority or the retailer where the product was purchased.



Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.



Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Meizhou Guo Wei Electronics Co. LTD., AD1 section, The economy exploitation area, Meizhou, Guangdong, P.R.China . ("MZGW")

What Does this Warranty Cover?

Subject to the exclusions contained below, MZGW warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will MZGW do?

MZGW or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this limited warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR MZGW BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	Two (2) years from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or MZGW are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, MZGW or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please visit us at:

motorolanursery.com/support

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a MZGW Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and MZGW regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by MZGW or representations made by any agent, employee or staff of MZGW, that may have been made in connection with the said purchase.

EU and UK Declaration of Conformity (DoC)

Hereby, MZGW declares that this product is in compliance with the requirements for CE and UKCA marking. The Declaration of Conformity can be obtained at motorolanursery.com.

FCC and IC regulations

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Warning

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Manufactured by:

Meizhou Guo Wei Electronics Co., Ltd.

Factory address:

AD1 Section, The Economic Development Area, Meizhou,
514000, Guangdong Province, China

USA address:

16192 Coastal Highway, Lewes, Delaware, 19958, County of
Sussex, USA

UK address:

207 Regent Street, Suite 8, Third Floor, London, W1B 3HH. UK

EU address:

51 Bracken Road, Carlisle Offices, Dublin 18, D18 CV48. Ireland

Contact email address:

support@motorolasound.com

Manufactured, distributed or sold by
Meizhou Guo Wei Electronics Co. LTD.,
official licensee for this product. MOTOROLA
and the Stylized M Logo are trademarks
or registered trademarks of Motorola
Trademark Holdings, LLC. and are used
under license. All other trademarks are
the property of their respective owners.
© 2024 Motorola Mobility LLC. All rights
reserved.

Version 5 (EN)

