

VM75 5" Video Baby Monitor



For: VM75, VM75-2, VM75-3 and VM75-4

User Guide

# Welcome...

## to your new Motorola Digital Video Baby Monitor!

Thank you for purchasing the Digital Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please visit: us at

motorolanursery.com

 
This User's Guide provides you with all the information you need to get the most from your product.

Before you can use the baby monitor, we recommend you insert and fully charge the battery in the Parent Unit, so that it continues to work if you disconnect it from the power supply to carry it to another location. Please read the Safety Instructions on pages 7 - 9 before you install the units.

## Got everything?

- 1 x Parent Unit (with built-in Li-ion battery)
- 1 x Baby Unit (Camera)
- 2 x Power adaptors (Parent Unit and Baby Unit)
   In multi-camera packs, you will find one or more additional baby units with power adapter units.

## Overview of the Parent Unit



#### 1. Display (LCD screen)

# 2. Battery status, Power, Sound level, Pairing indicators

a)Lights up in purple when the Parent Unit's battery is being charged, it turns blue when the battery is fully charged. b) Lights up in green when the Parent Unit is switched on.

C) Green-Orange-Red-Red
Show the sound level detected by
the Baby Unit - the louder the sound
detected, the more LEDs light up.
Flashes rapidly in green when the
Parent Unit is searching for the Baby
Unit, or is in pairing mode.

#### 3. Main menu button

Press to enter/exit menu mode.

### I. OK∕ÿ button

When in a menu, press to choose an item, or save a setting.

Press to enter remote scan mode.

## Control key panel

UP / VOLUME+ ▲

Press to increase speaker volume in camera viewing mode.
When in a menu, press to scroll up.

When in remote scan mode, press to tilt up.

#### DOWN / VOLUME - ▼

Press to decrease speaker volume in camera viewing mode.

When in a menu, press to scroll down.

When in remote scan mode, press to tilt down.

#### LEFT **◄**

Decrease brightness in camera viewing mode.

When in a menu, press to scroll left. When in remote scan mode, press to pan left.

#### **RIGHT** ▶

Increase brightness in camera viewing mode.

When in a menu, press to scroll right. When in remote scan mode, press to pan right.

#### 5. TALK BACK 🖢

Hold down to talk back to the baby unit.

#### 7. Power button 🖰

Press and hold to switch the unit On/ Off


Press to turn the video screen Off/

#### 8. Power socket

Talk back function 👤

| Parent Unit display icons                       |
|---|
| Signal Strength [,,                             |
| Camera Power Mode - AC or Battery ₩ IIII        |
| Camera Patrol Mode                              |
| <b>9</b> 1¢ <b>9</b> 2¢ <b>9</b> 3¢ <b>9</b> 4¢ |
| Camera Identification Number                    |
| <b>Q</b> 1 <b>Q</b> 2 <b>Q</b> 3 <b>Q</b> 4     |
| Speaker on / off ■                              |
| Lullabies menu / mode 🎜                         |
| Zoom menu / mode 🍳                              |
| Night vision 🔮                                  |
| Alarm timer 🛱                                   |
| Parent unit battery status                      |
| Parent unit brightness                          |
| Speaker volume                                  |
| Video on timer 🖪                                |
| Add camera 🗓                                    |
| Delete camera \boxed                            |
| View camera 🕒                                   |
|   |

## Overview of Your Baby Unit (Camera)

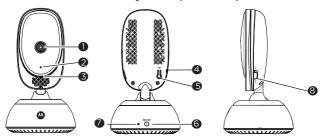

- 1. Camera Lens
- 2. Microphone
- 3. Power indicator\*

Lights up in blue when the Baby Unit is switched on and linked to the Parent Unit.

Off when the Baby Unit is switched

4. Light Sensor (Night Vision Mode)

#### 5. Pair Key

Press and hold to pair with the Parent Unit.

- Power Adapter Socket
- 7. Temperature Sensor
- 8. Power ON/OFF switch
  Slide to switch the Baby Unit on

#### 4. Light Sensor (Night Vision Mode

#### \*NOTE

Auto night mode will always switch OFF this blue LED when darkness is detected. During daylight when night mode cannot be activated automatically, you can short press the "pair" button at the back of the camera to switch the blue LED ON or OFF.

- This manual ON/OFF feature will not work when the VM75 is in night mode.
- The blue LED will always revert to ON after being OFF during night mode when daylight is detected.

#### Important guidelines for the installing your Baby Monitor

- To use your Video Monitor Baby and the Parent Unit together, you must be able to establish a radio link between them, and the range may be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Units may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls or electrical equipment, such as radios, TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the Baby Monitor at least 5 feet from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.

## Table of contents

| 1. | Safety Instructions |   |    |  |  |
|----|---------------------|---|----|--|--|
| 2. | Getting Start       | etting Started10                        |    |  |  |
|    | 2.1 Power           | up the Baby Unit                        | 10 |  |  |
|    | 2.2 Charge          | e the Parent Unit                       | 11 |  |  |
| 3. | Using the Ba        | by Monitor                              | 12 |  |  |
|    |                     | Úp                                      |    |  |  |
|    |                     | On or Off the Baby Unit                 |    |  |  |
|    |                     | On or Off the Parent Unit               |    |  |  |
|    | 3.4 Night V         | /ision Mode                             | 13 |  |  |
| 4. | Parent Unit N       | Menu Options                            | 14 |  |  |
|    |                     | Speaker Volume                          |    |  |  |
|    |                     | Screen Brightness                       |    |  |  |
|    |                     | Settings                                |    |  |  |
| 5. | Disposal of t       | he Device (environment)                 | 18 |  |  |
| 6. | Cleaning            |   | 19 |  |  |
| 7. | Troubleshoo         | oting                                   | 20 |  |  |
| 8. | General Information |   |    |  |  |
| 9. |                     | pecifications                           |    |  |  |
| ٠. | . cciicai op        | , oo iii oo ti o ii o ii o ii o ii o ii | 20 |  |  |

## 1. Safety Instructions



Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.



Safety Instructions 7

#### **BABY UNIT SET UP & USE:**

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her crib.
- Place the Baby Unit on a flat surface, such as a dresser, bureau, or shelf
  or mount the Unit to a wall securely using the keyhole slots in the
  underside of the stand.
- NEVER place the Baby Unit or cords within the crib.

#### WARNING

This Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- · Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the Unit and cords should be more than 3 feet away).
- · Keep the cords out of reach of children.
- · Do not cover the Baby Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor in damp areas or close to water.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Please contact the helpline if you require a replacement battery.

- · Do not touch the plug contacts with sharp or metal objects.
- · Connect the power adapters to easily accessible electrical outlets.
- · The wall mounting height is less than 2m for the baby unit.

#### CAUTION

The Parent Unit includes a built-in, lithium-ion rechargeable battery pack, which is not a user-accessible item. If you think the battery needs replacing, please contact the helpline. Do not try to replace it yourself.

Risk of explosion if battery is replaced by an unapproved battery type.


Dispose of used batteries according to their instructions.

The Unit should be set up and used so that parts of the user's body other than the hands are maintained at a distance of approximately 8 inches (20 cm) or more.

Safety Instructions 9

## 2. Getting Started

### 2.1 Power up the Baby Unit

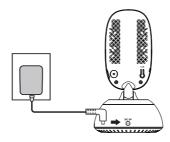

- Place the Baby unit near a electrical outlet in the room where you're going to be monitoring your baby most of the time. It should also be at least 3 feet away from your baby.
- Plug the DC plug of power adapter into the Baby unit, connect other end to a suitable electrical outlet.
- Slide the Power on off switch on the side of the baby unit up to turn it on.


#### IMPORTANT

 Only use the supplied power adapter (DC5V/1000mA).

10 Getting Started

### 2.2 Charge the Parent Unit

The Parent Unit comes with a built-in Li-ion battery.



- Plug the DC plug of power adapter(DC5V/1000mA) into the Parent unit, connect the other end to a suitable electrical outlet.
- · Leave to charge for 16 hours.

#### TIP:

The first time you use the Parent unit, or if you haven't used it for a long time, it'll take 16 hours to fully charge.

The battery life on a single charge lasts for approximately 4 hours. We recommend you keep the cable plugged into the mains power socket if you're going to use for longer than this or throughout the night.

When the battery gets very low, it'll take about 30 minutes to charge enough for you to use it for a short time. To charge the Parent unit in the shortest amount of time, turn it off while it's charging.

- After the Parent unit has charged for 16 hours you can switch it on.
- Before you do, move the Parent unit at least 3 feet from the Baby unit. Any closer and you might get audio feedback interference.
- Press and hold the Power button to turn the Parent unit on, the Parent unit and Baby unit are automatically linked and ready to use.

Getting Started

## 3. Using the Baby Monitor

Please read these instructions carefully, and be aware that this baby monitor is only intended as an aid. It is not a substitute for responsible adult supervision.

## 3.1 Setting Up

- · Make sure that the Baby Unit and Parent Unit are both switched on.
- Place the Baby Unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor.

#### NOTE

Do not place the Baby Unit within reach of a child or baby! If there is interference with the picture or sound, try moving the units to different locations, and ensure that they are not close to any other electrical equipment.

If you place the Parent Unit and Baby Unit too close together, you may hear a high pitched noise. This is not a fault. The units are designed to be operated at some distance apart. So move the units further apart.

### 3.2 Power On or Off the Baby Unit

Slide the Power  $^{\circ}$ N  $\bigcirc$   $^{\circ}$ P switch to the ON position to switch on the Baby Unit. The power indicator lights up in blue.

Slide the Power ON an OFF switch to the OFF position to switch off the Baby Unit. The power indicator goes off.

### 3.3 Power On or Off the Parent Unit

Press and hold the Power  $\bullet$  button to switch on the Parent Unit. The power indicator lights up in green.

Press and hold the Power  ${\bf \Phi}$  button to switch off the Parent Unit. The power indicator goes off.

### 3.4 Night Vision Mode

The Baby Unit has high-intensity infrared LEDs for picking up clear images in the dark. When the built-in light sensor on the side of the Baby Unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the Parent Unit will display in black and white. The t icon will be displayed on the screen.

Using the Baby Monitor

## 4. Parent Unit Menu Options

### 4.1 Adjust Speaker Volume

The Parent Unit has 8 volume levels + off.

To adjust volume, press the ▲ UP or ▼ DOWN button when the Parent Unit is in camera viewing mode.

## 4.2 Set the Screen Brightness

The Parent Unit has 8 brightness levels.

To adjust brightness, press the  $\blacktriangleleft$  LEFT or  $\blacktriangleright$  RIGHT button when the Parent Unit is in camera viewing mode.

## 4.3 Adjust Settings

You can adjust the following settings on the Parent Unit: Iullabies , alarm , video on timer, zoom function, temperature format , add , delete view camera.

To access settings menu, switch on the Parent Unit and press the 

MENU button, the menu icons appear on the left of Parent Unit screen, you can navigate through the menu options using the 
UP, ▼ DOWN, ■ LEFT or ► RIGHT, and press OK to select an option.

#### 4.3.1 Set lullaby

You can select one or all the 5 Iullabies to play over the Baby Unit (Camera). To activate Iullaby, proceed as follows:

- Press the MENU button when the Parent Unit is in camera viewing mode.
- Press the ▲ UP /▼ DOWN button to select the lullaby of your choice (1-5) or play all (←¬).
- Press the OK button, then press ▲ UP /▼ DOWN button to adjust the volume of the lullaby.
  - You can stop playing the Iullaby by selecting the 🚫 icon.
- 5. Press the FMENU button twice to return to the main screen.

#### 4.3.2 Set alarm

You can use the Parent Unit to set an alarm as a reminder for you to take care of your baby. If an alarm time is selected, the Parent Unit will beep at the end of the selected 2, 4 or 6 hour period. The alarm will sound for about 30 seconds when the time is reached, or can be stopped by pressing any button.

To activate an alarm, proceed as follows:

- Press the MENU button when the Parent Unit is in camera viewing mode.
- 2. Press the ■ LEFT/▶ RIGHT button to select 🔯 .
- Press the ▲ UP/▼ DOWN button to select the time period after which you wish the alarm to sound.
- 4. Confirm with the OK button, and return to the main screen.

#### 4.3.3 Screen off timer

You can set the screen off time for the Parent Unit after it is in idle mode for a specific time interval (5 mins, 15 mins or 30 mins). When the screen is turned off, you can still hear sound from the Baby Unit.

- Press the MENU button when the Parent Unit is in camera viewing mode.
- 2. Press the ■ LEFT/▶ RIGHT button to select □ .
- Press the ▲ UP /▼ DOWN button to select the time period after which the screen should switch off automatically (5 mins, 15 mins or 30 mins).
- 4. Confirm with the OK button, and return to the main screen.
- 5. You can cancel standby mode by selecting the \infty icon.

#### 4.3.4 Digital Zoom

You can zoom in or out when viewing the image on the Parent Unit.

- Press the MENU button when the Parent Unit is in camera viewing mode.
- 3. Press the ▲ UP /▼ DOWN button to select [x1]/[x2] zoom
- 4. Press the MENU button to exit menu mode.

Parent Unit Menu Options

### 4.3.5 Set temperature format

The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top of the Parent Unit LCD screen. You can switch temperature format between Centigrade and Fahrenheit as follows:

- 1. Press the FMENU button when the Parent Unit is in camera viewing mode.
- 2. Press the ■ LEFT/▶ RIGH button to select 💇.
- 3. Press the ▲ UP/▼ DOWN button to select °C or °F.
- 4. Confirm with the OK button, and return to the main menu.

#### 4.3.6 Add camera

You can connect one Parent Unit with up to four Baby Units(cameras).

To add a compatible camera to the Parent Unit, proceed as follows:

- 1. Press the MENU button when the Parent Unit is in camera viewing mode.
- Press the ▲ UP /▼ DOWN button to select a number and confirm with the OK button. The sound level indicator will flash in green rapidly while the parent unit searches for a camera.
- 4. Hold down the PAIR button on the rear of the camera until an acoustic signal is heard and the transmission image from the camera that has been added appears on the screen.

#### 4.3.7 Delete camera

If you wish to delete the connection to a camera, proceed as follows:

- 1. Press the FMENU button when the Parent Unit is in camera viewing mode.
- Press the ▲ UP /▼ DOWN button to select the number of the camera that you wish to delete.
- 4. Confirm with the OK button.
- Press ▼ DOWN button to select [X], and then press OK to confirm delete.
   Note: you cannot delete a camera if it is the only unit paired to the Parent Unit.
- 6. Press the MENU button to return to the main screen.

#### 4.3.8 View camera

If you have more than one camera paired with the Parent Unit, to select the transmission image from a specific camera, proceed as follows:

- Press the MENU button when the Parent Unit is in camera viewing mode.
- Press the ▲ UP /▼ DOWN button to select the number of the camera that you wish to view, or the scan icon to view each paired camera in sequence at about 20 seconds interval.
- 4. Confirm with the OK button.
- 5. In addition, split mode viewing is also supported.

#### 4.3.9 Two-way communication

The Parent Unit has a two-way communication function. To activate two-way communication function, hold down the button on the Parent Unit and speak into the unit. The words speak will be heard on the camera. To deactivate two-way communication function, release the button.

#### 4.3.10 Remote Pan Scan

The baby monitor and camera with pan scan to keep an eye on your child from a 5" diagonal video screen, you can remotely pan scan the video image as needed

- 1. Press the OK button to enter scan mode
- 2. Press the ■ LEFT/▶ RIGHT button to pan scan.
- 3. Press the  $\triangle$  UP /  $\nabla$  DOWN button to tilt Up/Down the image.
- 4. Press the OK button to exit scan mode.

Parent Unit Menu Options 17

## 5. Disposal of the Device (environment)

At the end of the product's life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the Product, User's Guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

## 6. Cleaning

Clean your Baby Monitor with a slightly damp or anti-static cloth. Never use cleaning agents or abrasive solvents.

## Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals — this may cause permanent damage to the product which is not covered by the Warranty.
- Keep your Baby Monitor away from hot, humid areas or conditions, strong sunlight and avoid moisture.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

#### **IMPORTANT**

Always switch off and disconnect the power adapter before cleaning your baby monitor.

Cleaning 19

## 7. Troubleshooting

### Power Indicator on the Parent Unit does not come on

- · Check whether the Parent Unit is powered on.
- · Check whether the battery is charged.
- · Recharge the Parent Unit by connecting it to the power supply.

### The Parent Unit beeps repeatedly

- The Parent Unit and the Baby Unit may be out of range with each other.
   Reduce the distance between the units, but not closer than 3 feet.
- The Baby Unit may be switched off. Slide the ON/OFF switch to the On position to switch on the Baby Unit.
- The battery in the Parent Unit is running low. Connect the Parent Unit to the electrical outlet with the supplied power adapter for recharging.

#### icon on the Parent Unit flashes

 Battery pack in the Parent Unit is running low. Connect the Parent Unit to the electrical outlet with the supplied power adapter for recharging.

#### The Parent Unit switches itself off

 It could be that the Parent Unit is in standby mode. Check whether the video on timer has been selected in the menu and deactivate it where necessary.

## Cannot hear sound or baby crying from the Parent Unit

- The volume level in the Parent Unit may be set too low. Refer to section 4.1 for volume level settings.
- The Parent Unit and the monitoring Baby Unit may be out of range with each other. Reduce the distance between the units, but not closer than 3 feet.

20 Troubleshooting

### The baby monitor system produces a high-pitched noise

- The Parent Unit and the Baby Unit are too close to each other. Make sure the Parent Unit and Baby Unit are at least 3 feet away from each other.
- The speaker volume of the Parent Unit may be set too high. Decrease the volume of the Parent Unit.

### Battery pack in the Parent Unit is running low quickly

- The LCD brightness may be set too high. Try to decrease the brightness level. Refer to section 4.2 for details.
- The volume level of the Parent Unit may be set too high, which consumes power. Decrease the volume level of the Parent Unit. Refer to section 4.1 for volume level settings.

### Parent Unit image is not in color

 The Baby Unit is in a dark room, which causes the infra-red illumination to turn on and the picture image to change from color to black and white.
 When the room becomes brighter, the picture will return to color.

## There is no transmission from the Baby Unit to the Parent Unit

- · Switch on both the Baby and Parent Units.
- Pair the Baby Unit again as described in see "4.3.6 Add camera".
   If there is no free camera location, delete a location first, as described in see
   "4.3.7 Delete camera".

### The Parent Unit is in standby

• To turn on the Parent Unit screen, press the ON/OFF button **b** briefly.

Troubleshooting 2

## 8. General Information

If your product is not working properly....

- 1. Read this User's Guide or the Quick Start Guide.
- 2. Contact us by visit at: motorolanursery.com/support

## **Consumer Products and Accessories Warranty**

Thank you for purchasing this Motorola branded product manufactured under license by Meizhou Guo Wei Electronics Co. LTD ("MZGW").

#### What Does this Warranty Cover?

Subject to the exclusions contained below, MZGW warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product is manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable

#### Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

#### What will MZGW do?

MZGW or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts.

#### What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED. WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, IN NO EVENT SHALL MOTOROLA OR MZGW BE LIABLE. WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND. OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

General Information

| Products Covered  | Length of Coverage  |  |
|---|---|--|
| Consumer Products   | Two (2) years from the date of the<br>Products' original purchase by the first<br>consumer purchaser of the product.          |  |
| Consumer Accessories  | Ninety (90) days from the date of<br>the Accessories' original purchase<br>by the first consumer purchaser of<br>the product. |  |
| Consumer Products and<br>Accessories that are Repaired or<br>Replaced | The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.     |  |

#### **Exclusions**

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or MZGW, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, MZGW or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

#### How to Obtain Warranty Service or Other Information?

To obtain service or information, please visit us at : motorolanursery.com/support

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a MZGW Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and MZGW regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by MZGW or representations made by any agent employee or staff of MZGW, that may have been made in connection with the said purchase.

General Information 2

## FCC and IC regulations

#### FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

#### ISED Warning

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil nedoit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### Radiation Exposure Statement:

The baby unit complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with minimum distance 20cm between the radiator& your body. The parent unit has been tested and comply with FCC and ISED SAR limits.

## <u>Déclaration d'exposition aux radiations:</u>

L'unité bébé est conforme aux limites d'exposition aux rayonnements FCC / ISED établies pour un environnement non contrôlé. L'unité bébé doit être installée et utilisée avec une distance minimale de 20 cm entre le radiateur et votre corps.

L'unité parent a été testée et est conforme aux limites SAR FCC et ISED.

General Information

## 9. Technical Specifications

#### **Baby Unit**

| Frequency     | 2400 MHz - 2483.5 MHz   |
|---------------|---|
| Image sensor  | Color CMOS 0.3M Pixels  |
| Power Adapter | BECKY - BQ05A-0501000-U; Input:<br>100-240V 50/60 Hz 300mA;<br>Output: DC5V 1000mA<br>or,<br>YWK - YWK-AD050100-U<br>Input: 100-240V 50/60 Hz 300mA;<br>Output: DC5V 1000mA                           |
|               | WARNING: Use only the supplied power adapter.   |
| Parent Unit   |   |
| Frequency     | 2400 MHz - 2483.5 MHz   |
| Display       | 5" diagonal TFT LCD   |
| Power Adapter | Becky - BQ05A-0501000-U Input: 100-240V 50/60 Hz 300mA; Output: DC5V 1000mA or, YWK - YWK-AD050100-U Input: 100-240V 50/60 Hz 300mA; Output: DC5V 1000mA WARNING Use only the supplied power adapter. |

Specifications are subject to change without prior notice.

3.8V 2000mAh Lithium Battery Pack

Battery

< This page has been intentionally left blank >

Manufactured, distributed or sold by Meizhou Guo Wei Electronics Co. LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2023 Motorola Mobility LLC. All rights reserved.

Version 11 (EN\_US)

